



Bon stone lifting clamps are furnished with 1/2" stud in base of opening. A pilot hole drilled in the backside (unfinished side) of the stone is required for proper use. Three model sizes are available.


DRILL THE HOLE

- A 1/2" diameter hole is drilled, more than 1/2" deep, for the 3/4 ton (#11-887) and 1 ton (#11-888) models.
- A 3/4" diameter hole is drilled, more than 1" deep for the 2 ton (#11-889) stone clamp.
- The hole should be centered horizontally according to the weight. The center of the hole can be no more than 2" from the top of the stone for 3/4 ton, 3-1/4" for 1 ton and 4-1/4 for the 2 ton clamp.

POSITION THE CLAMP

- Place the clamp down on the stone, positioning the pin in the drilled hole.
- Tighten the clamp firmly using the T-handle.
- To lift the stone, run the appropriately rated chain, wire rope, or a hook through the screw-pin shackle, then lift.

ALWAYS WEAR EYE PROTECTION

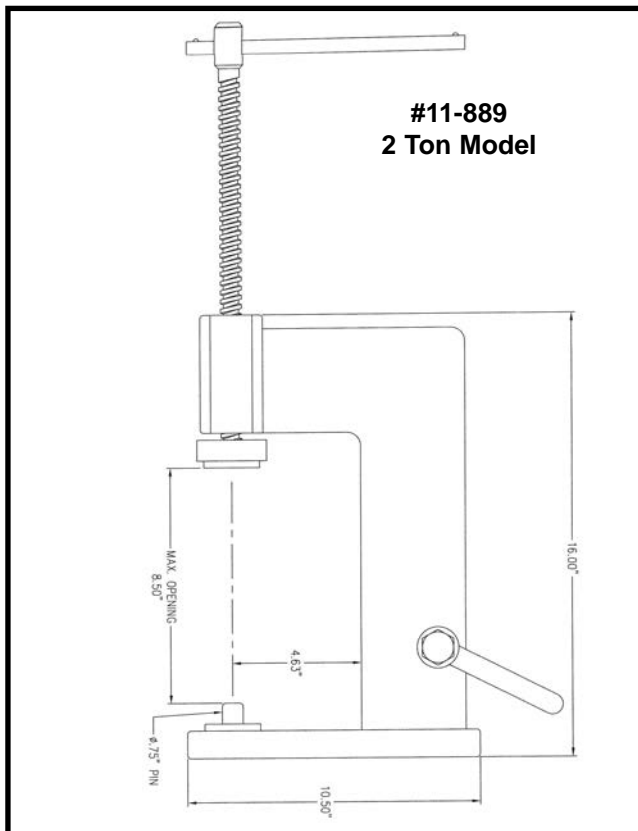

Part #	Opening	Capacity
11-887	3"	3/4 Ton
11-888	5"	1 Ton
11-889	8-3/4"	2 Ton