



# MASONRY PROJECT


## #30

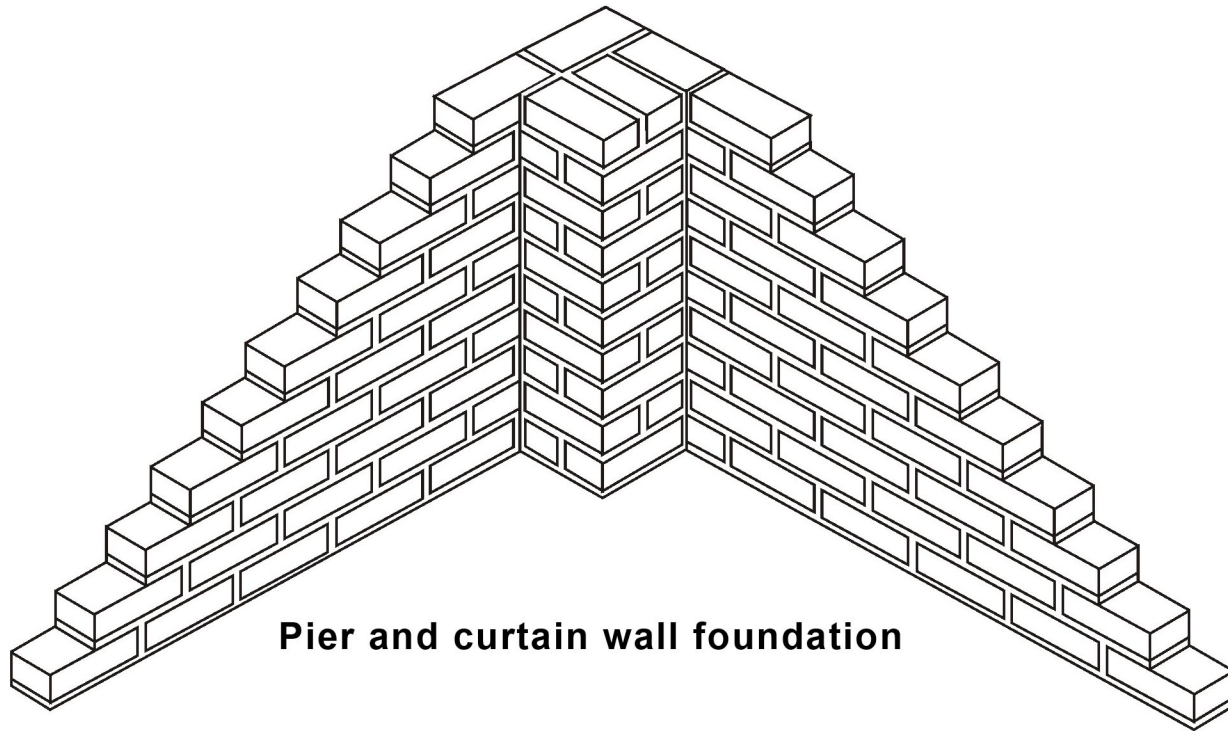


Pier and curtain wall foundation

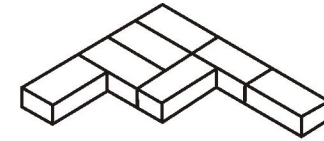

Plan of ninth course

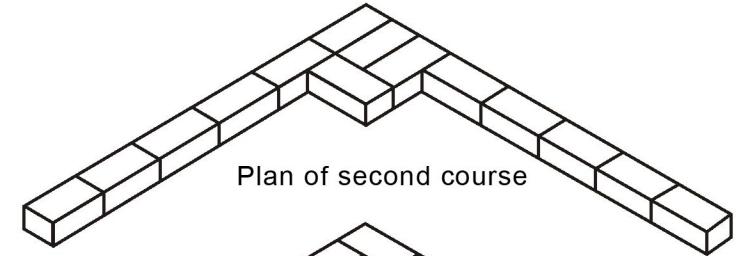

Plan of second course

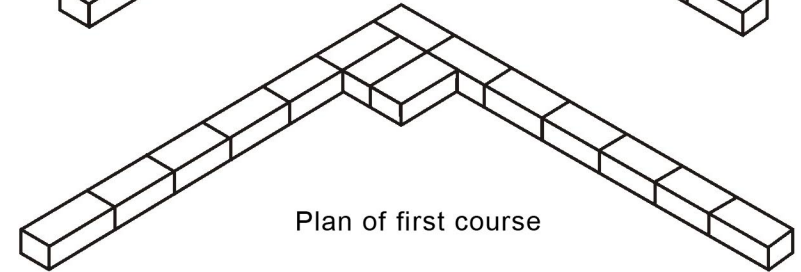

Plan of first course

**Bon Tool Co. does not guarantee the accuracy of the data.  
Please report errors and submit suggestions to Bon Tool Co.**

### INSTRUCTIONS

1. Build corner lead as shown.
2. Project is 10 courses high.
3. Pier to be bonded with curtain wall at 2nd and 9th courses.
4. Face only the "outside" section of the wall.
5. Pier is on "inside" of wall.
6. Outside joints to be concave tooled, and inside joints to be flush-cut.
7. Use modular spacing rule. height to be 3 courses in 8 inches.
8. First bed joint may be used to level project and will not be considered in judging.
9. No sacking or oiling permitted.

**Bon Tool Co.**

Gibsonia, PA 15044 • USA • 724-443-7080 • [www.bontool.com](http://www.bontool.com)